













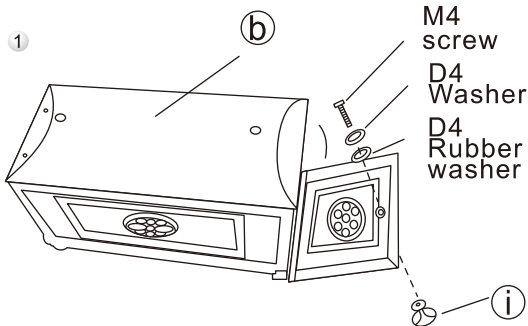


Better Box Mailbox with Paper Box Parts List


M8 stud (1 pcs) 	M6 screw (1 pcs) 	M4 screw (1 pcs-attached to door knob) 
M8 screw (2 pcs) 	M8 bolt (1 pcs) 	
M8 nut (4 pcs) 	M6 nut (6 pcs) 	
D8 washer (5 pcs) 	D6 washer (8pcs) 	D4 washer (1 pcs-attached to door knob) 
	D6 rubber washer (4 pcs) 	D4 rubber washer (1 pcs-attached to door knob) 
Wrench 	Screwdriver 	

NO.	DESCRIPTION	QTY
Ⓐ	Post	1
Ⓑ	Mailbox	1
Ⓒ	Paper box	1
Ⓓ	Number plate	1
Ⓔ	Scroll	1
Ⓕ	Slide housing	1
Ⓖ	Slide alert	1
Ⓗ	Red flag	1
Ⓘ	Small brass knob	1
⓵	Large brass knob	1
Ⓚ	Assembly illustration sheet	1
Ⓛ	Tool bag (include goods below)	1
	Screwdriver	1
	Wrench	1
	M8 stud	1 pcs
	M8 screw	2 pcs
	M8 bolt	1 pcs
	M6 screw	1 pcs
	M4 screw – attached to door knob	1 pcs
	M8 nut	4 pcs
	M6 nut	6 pcs
	D8 washer	5 pcs
	D6 washer	8 pcs
	D4 washer – attached to door knob	1 pcs
	D6 rubber washer	4 pcs
	D4 rubber washer – attached to door knob	1 pcs


Better Box Mailbox with Paper Box Assembly Instructions




Open the door of the mailbox (b), then attach large brass knob (i) to the front of the door with M4 screw, D4 washer and D4 rubber washer.

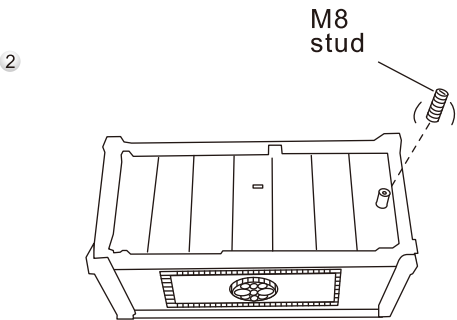

With the bottom facing up, insert M8 stud into the screw hole at the bottom rear of the mailbox.

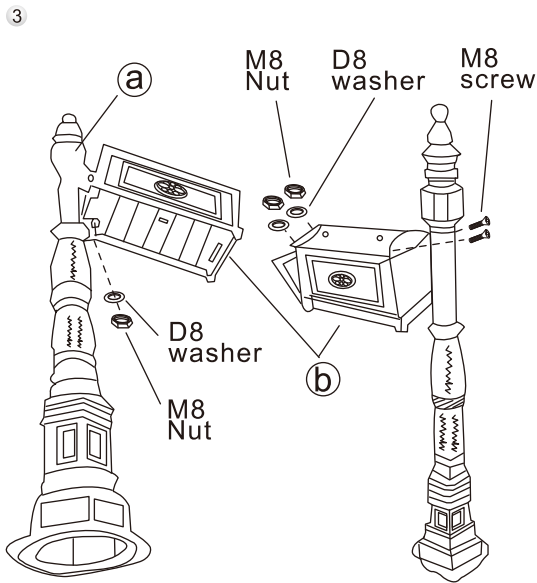


Attach the mailbox (b) to the post (a) on the bottom side with M8 nut and D8 washer and on the top side with 2 M8 screws, 2 M8 nuts and 2 D8 washers

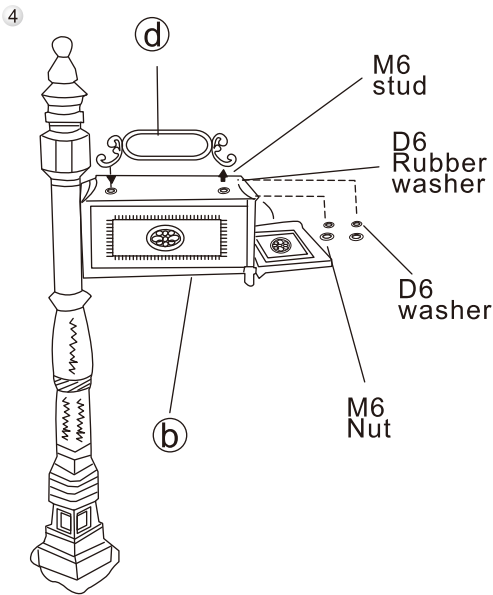


Place 2 D6 rubber washers over 2 M6 studs pre-inserted into the bottom of the number plate (d). Secure the number plate (d) from inside the mailbox (b) using 2 D6 washers and 2 M6 nuts.

Better Box Mailbox with Paper Box Assembly Instructions

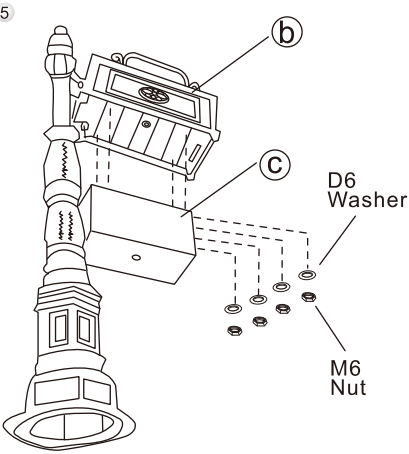

Mount the paper box (c) to the bottom of the mailbox (b) with 4 D6 washers and 4 M6 nuts.


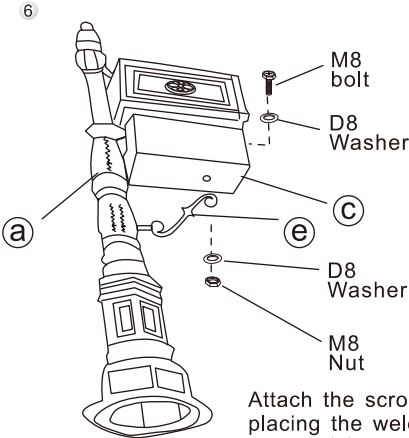


Attach the scroll (e) to the post (a) by placing the welded screw located on the scroll (e) into the hole on the post (a). Secure the scroll (a) to the paper box (c) by inserting the M8 bolt and the D8 washer through the paper box (c) and the scroll from inside the paper box (c). Place the D8 washer and the M8 nut over the bolt and tighten.

Your New Better Box is Equipped for Either a Slide or a Flag Alert.

7A: Slide Alert Option: Insert the slide alert (g) into the slide alert housing (f) and secure with the small brass knob (i).

7B: Flag Alert Option: Attach the flag (h) to the mailbox with M6 screw by placing D6 washer, D6 rubber washer and the flag (h) on M6 screw. After the flag (h), place another D6 rubber washer and a D6 washer on the M6 screw and attach the flag to the mailbox.

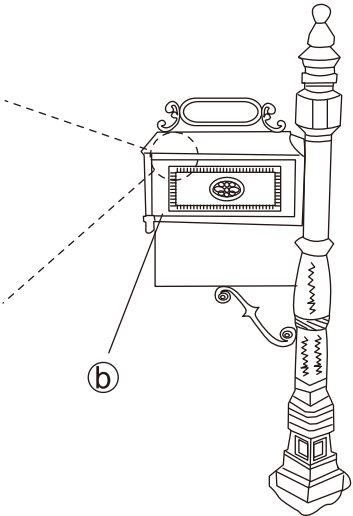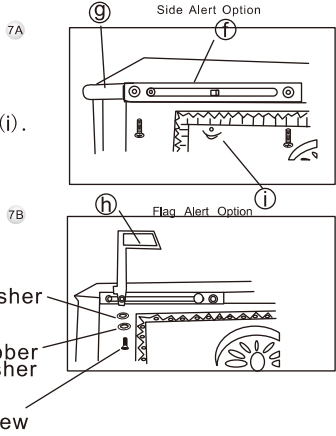

BETTER BOX MAILBOX POST MOUNTING INSTRUCTIONS

Your new Better Box Mailbox post can be mounted directly onto a sidewalk with 4 additional anchors and bolts. Or, you can install your new post directly into your yard by digging a hole 14"x14"x 4" deep with a level bottom. After leveling the post in the hole, pour in 40# of mixed concrete and let it set overnight. Tomorrow you can replace the top soil and mount your new Better Box Mailbox.

The last mounting option is over the top of a 4 x 4 wooden post or a 3 inch or 4 inch round metal post. This method works well and will be required to get below any pertinent frost lines. Insert the chosen style mounting post into your new Better Box Mailbox post and use as much ground depth as needed for direct burial. Once post burial is complete and your installation in place you can tap 2 holes through the Mailbox post and into the chosen mounting post to make the installation permanent.