
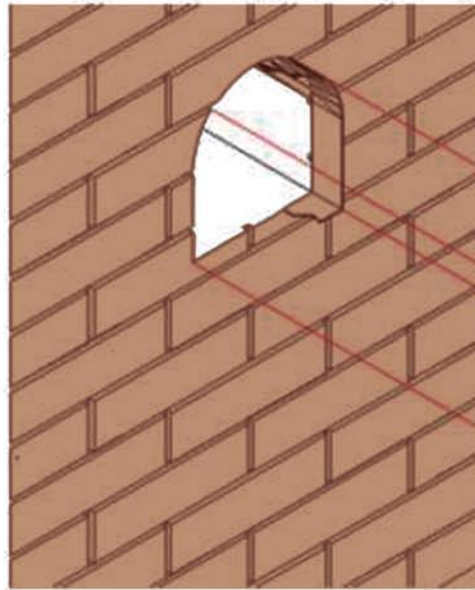


Better Box Mailboxes Brick Mailbox Replacement Door Installation Instructions

BRD6/BRD8

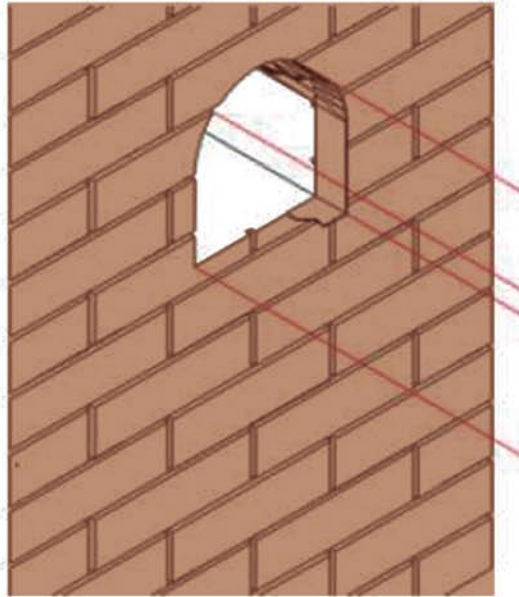


1. Cut your old mailbox flush with the brick, stone, or stucco surface.

2. Check for proper fit and make final surface preparations.



3. Apply a generous bead of clear silicone adhesive around the arch of your mailbox and insert your new door into the old mailbox frame. Push the door in until it is flush with the brick, stone, or stucco.

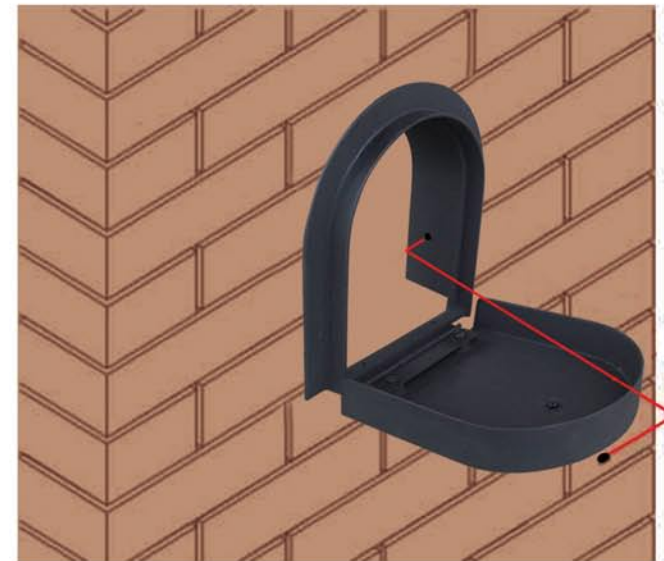

4. (Optional as needed to assure tight fit) After your new mailbox door is in place, insert 2 set screws into the pre-drilled set screw holes inside of the mailbox. Clean any excess silicone and enjoy your new Better Box Mailbox Brick Mailbox Replacement Door